

Casale Rustico
Installation Blueprints




Misto Bundle Installation

Misto Bundle Installation



Misto Bundle

- 1. Purchase 1 bundle of misto, which includes two 40 piece boxes of misto rectangle, and one 80 piece box of quadrato squares
- 2. Out of 160 pieces, you will be able to make forty 4 piece groupings each including two rectangles and two squares
- 3. Arrange the 4 piece rectangle and square groupings into the basic configurations shown at the right—these can be mirrored and rotated as desired in order to achieve a random look within your layout.

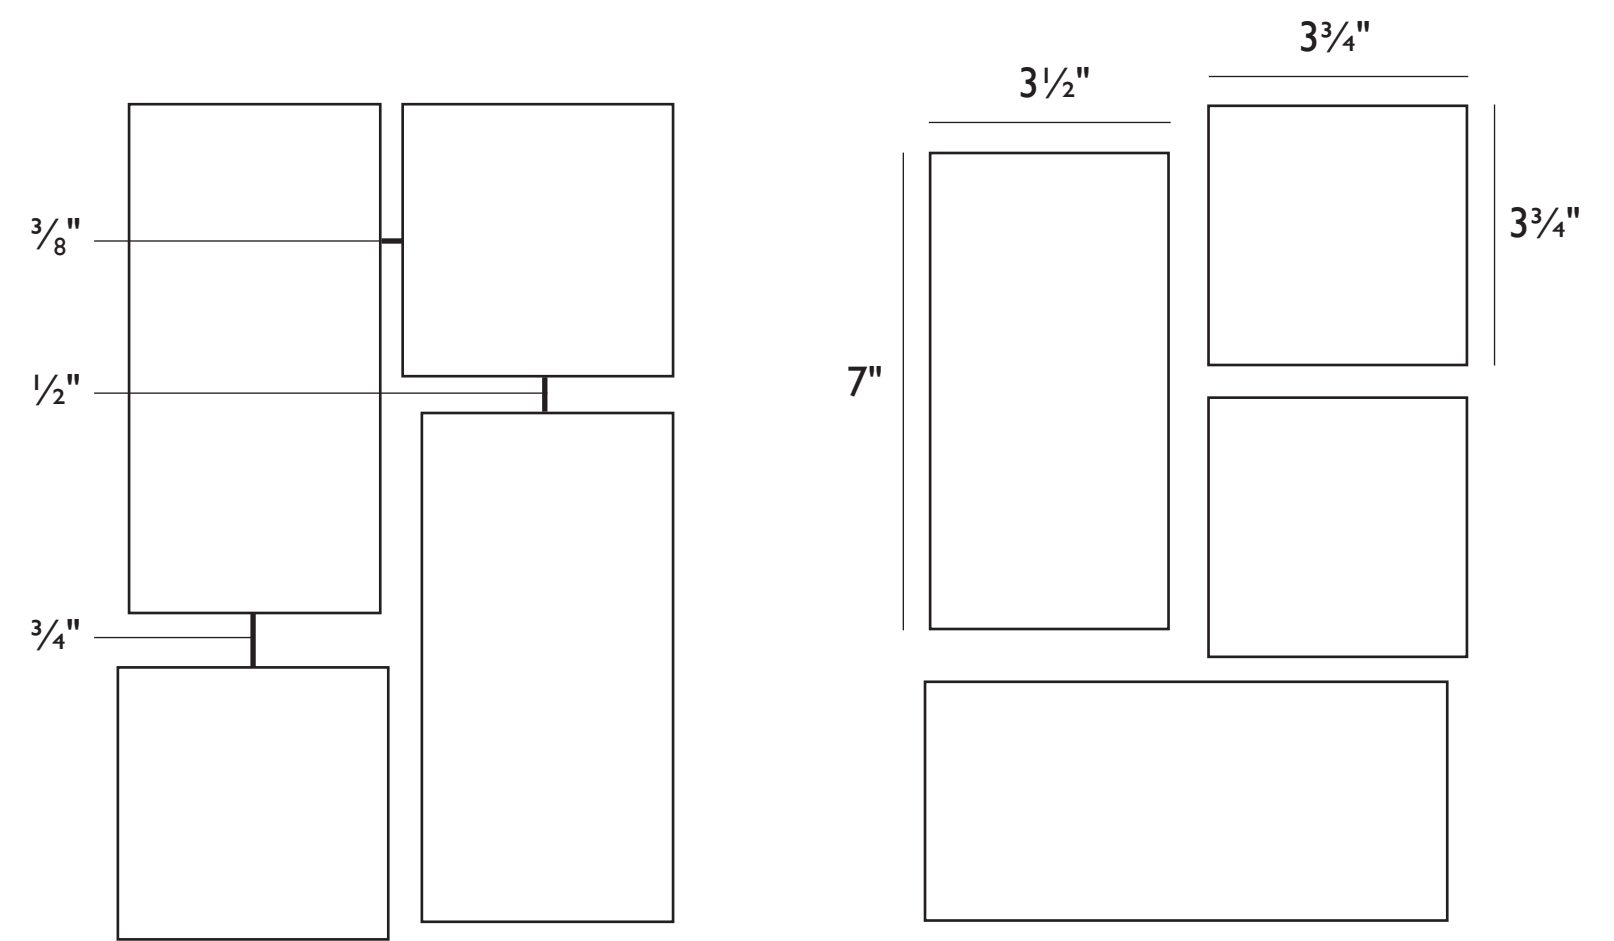




4. Within each 4 piece grouping and between them, alternate between a grout joint size of $\frac{3}{8}$ ", $\frac{1}{2}$ ", and $\frac{3}{4}$ "—this will have to be done visually and with the use of wedges (not spacers) in order to eliminate too many continuous vertical or horizontal lines from running through the layout.

NOTE: we highly recommend your contractor do a test board for you prior to install so you can review and approve the layout

5. One bundle (160 pieces) or forty 4 piece groupings will cover just under 24 square feet when incorporating an average grout joint size of $\frac{1}{2}$ ".
6. On the next page is an example of the pattern and grout joint spacing we used for our own misto installation.

NOTE: your actual install should be adjusted from our recommended layout as needed, just as our actual installation has shifted slightly as well

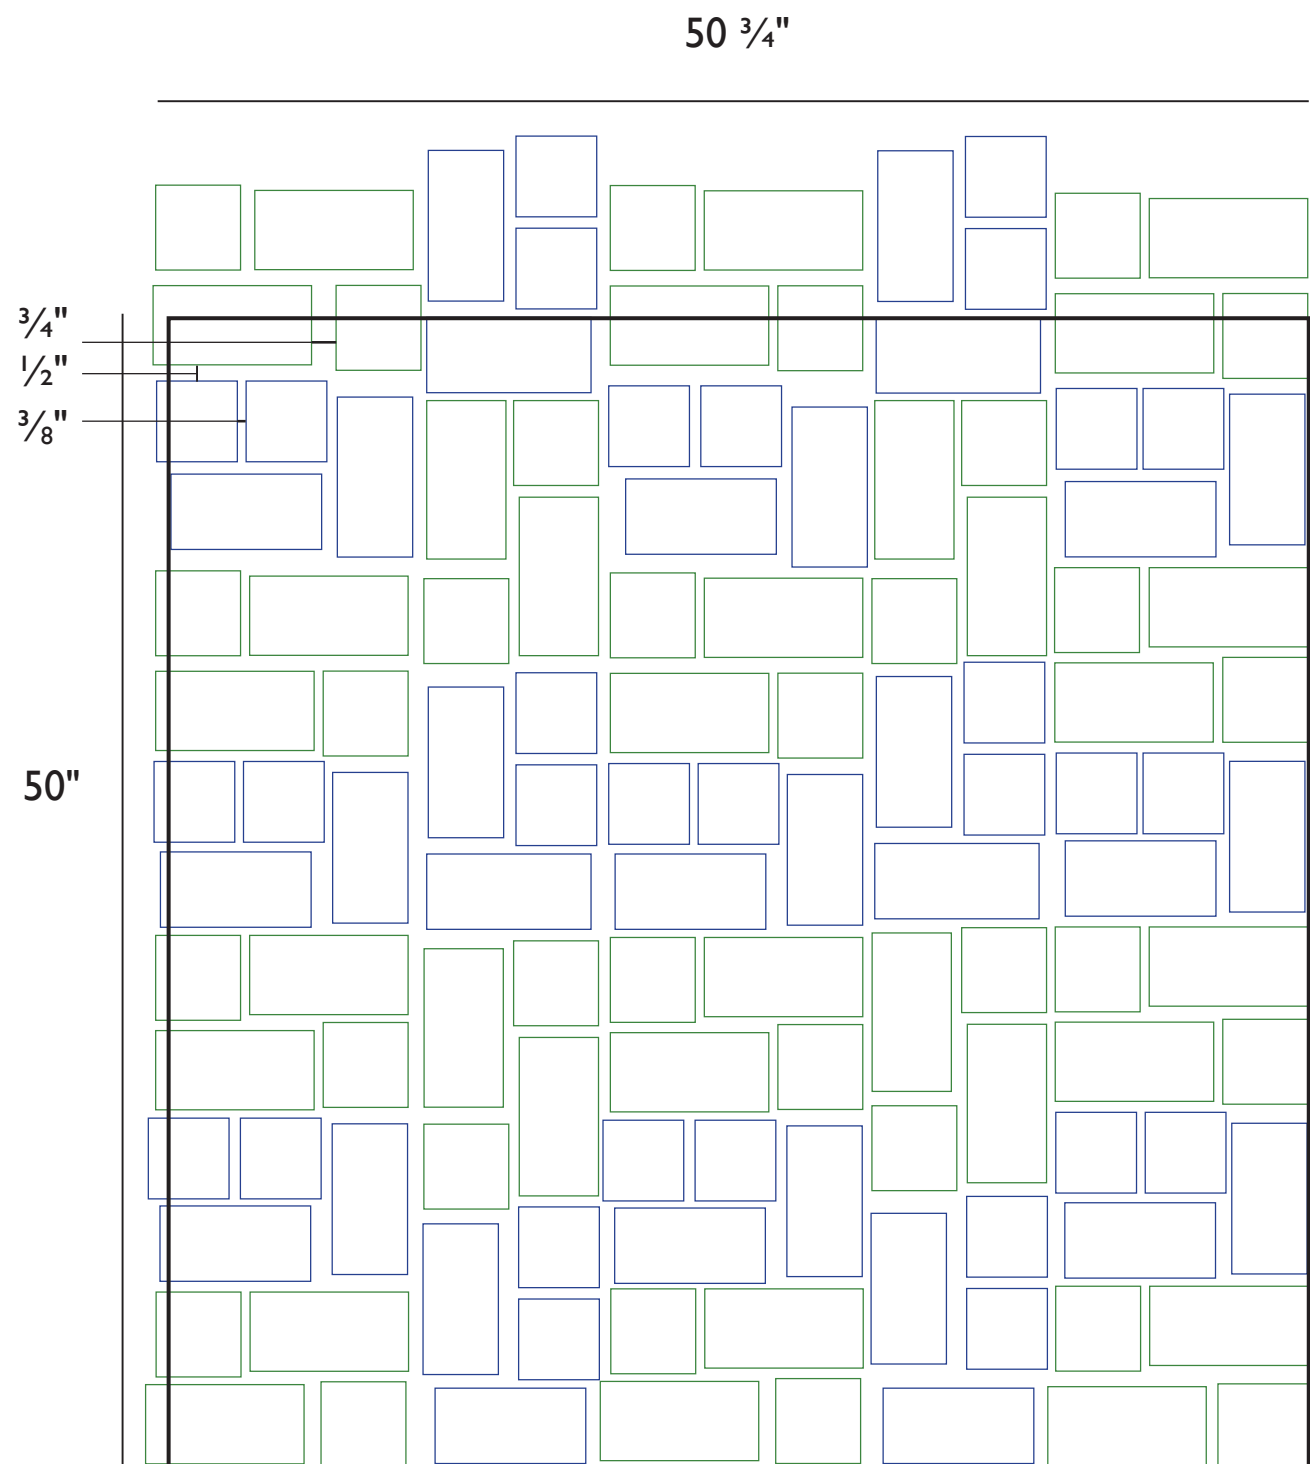


Normale Bundle Installation



Normale Bundle

- 1. Purchase one bundle of normale, which includes one 40 piece boxes of normale rectangles, and one 80 piece box of quadrato squares
- 2. Out of the 120 pieces, you will be able to make five 24 piece groupings, each including 8 rectangles and 16 squares
- 3. Arrange the 24 piece groupings into the configuration shown at the right which can be mirrored or flipped top to bottom in order to create a random look within your layout.

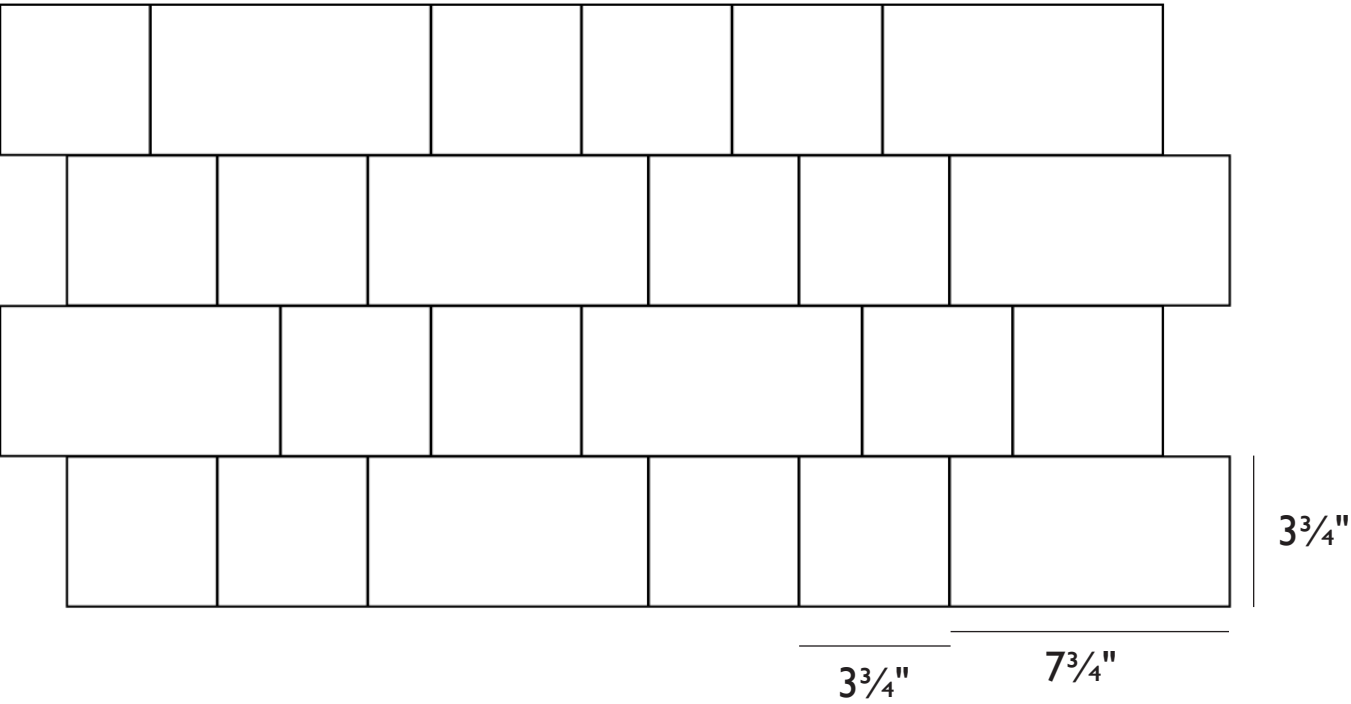




4.clé recommends a 1/8"-1/4" grout joint and the use of wedges, not spacers, to achieve the look of our Normale installation.

5. One bundle (120 pieces) or five 24 piece groupings will cover just under 16 square feet when a butt joint is used.

6. On the next page is an example of how we used the above recipe to create our own normale installation

NOTE: your actual install should be adjusted from our recommended layout as needed, just as our actual installation has shifted slightly as well

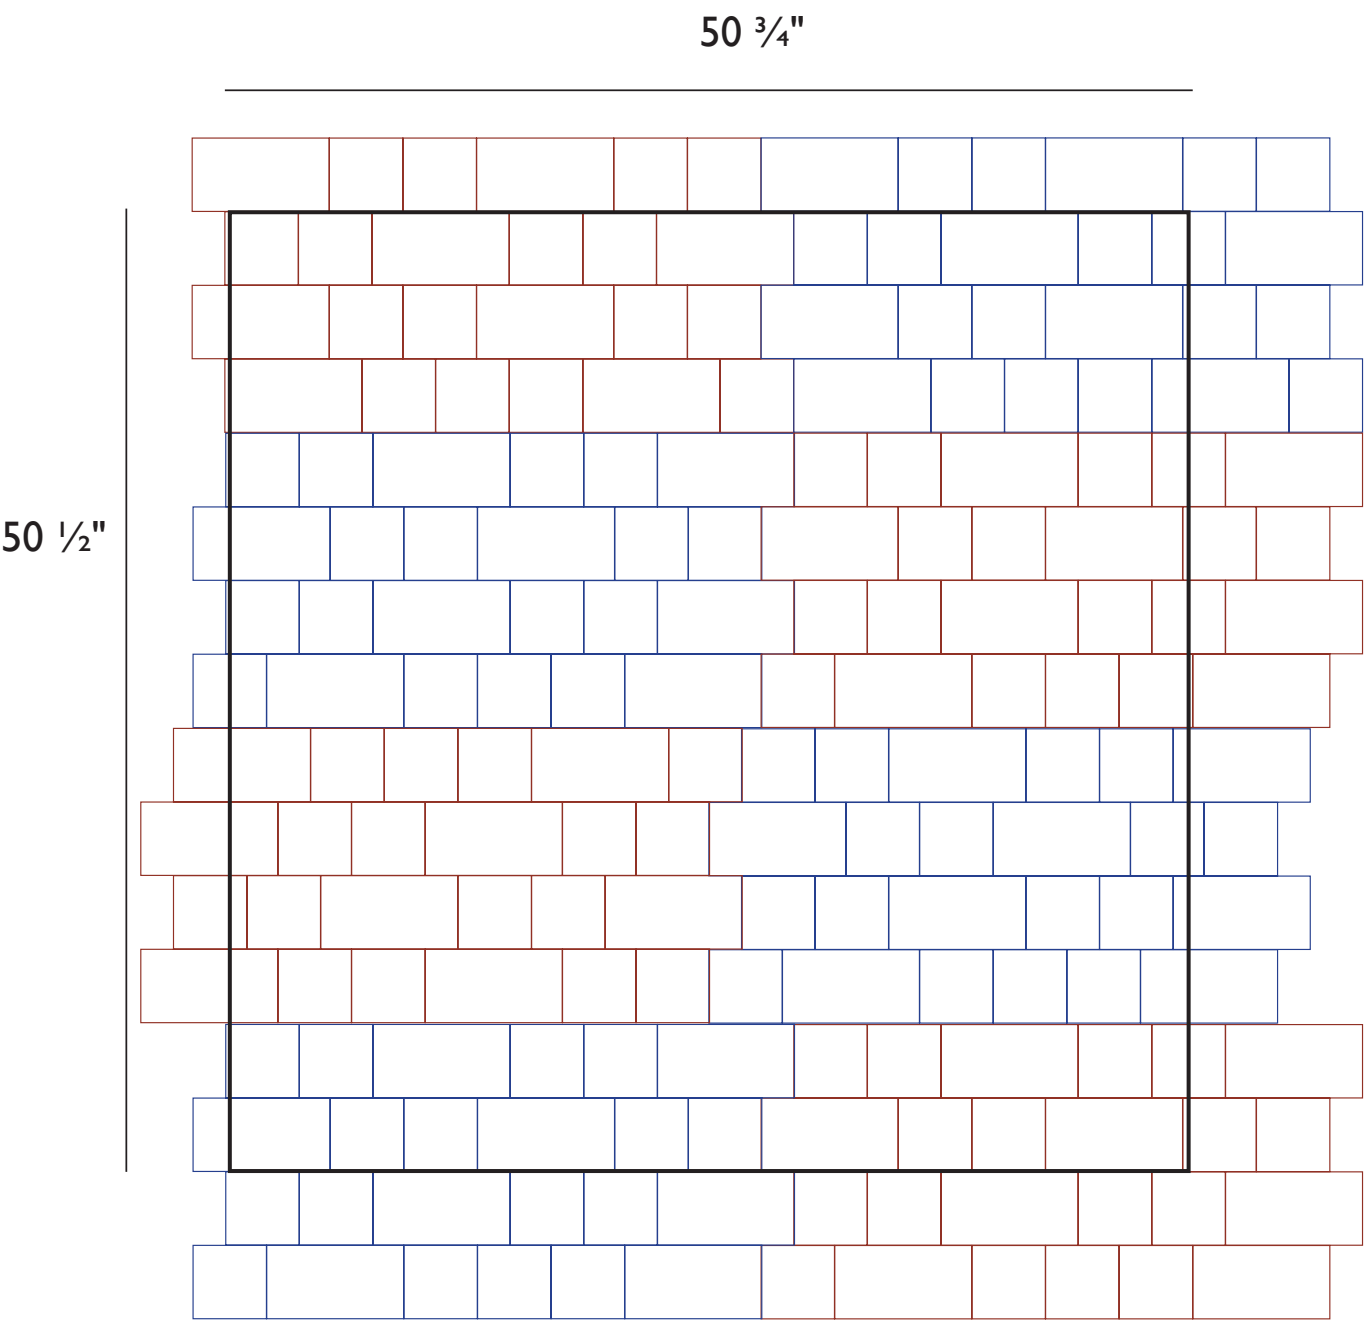

Misto and Normale Bundle Installations

